 


le WAND

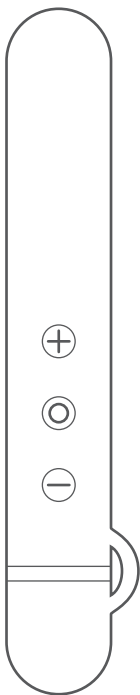

BATON

EN OVERVIEW

 
Congratulations on the purchase of your Le Wand™ Baton. This product delivers intense and sensual pleasure. The luxurious massager has 6 intensity levels and 15 vibration modes. Powerful, penetrating pleasure is granted in the convenience and versatility of a rechargeable compact massager.



Your Le Wand™ Baton is charged and ready for use.

HOW TO USE

- **Power On**
Press “+” button
- **Change Pattern**
Press “o” button
- **Increase / Decrease Intensity**
Press “+”/“-” button
- **Power Off**
Long press “-” button
- **Travel Lock**
Turn off first. Long press “+” and “-” button at the same time for 5 seconds. LED will flash twice indicating the item is locked. Repeat to unlock. The item will also automatically unlock while charging.
- **Charging**
When charging - LED is breathing
When fully charged - LED is solid
When low battery - LED is flashing

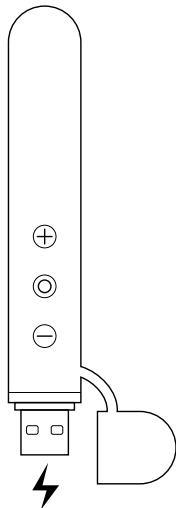


English.....	P. 3
Deutsch	P. 6
Español.....	P. 9
Français.....	P. 12
Nederlands	P. 15
Italiano	P. 18
Русский.....	P. 21

LE WAND CARE

- Always clean and dry your device thoroughly before and after use. Do not store wet. We recommend that you use a mild cleanser that is suitable for use with silicone items. Use water based lubricant as desired. Not compatible with silicone lubricant.
- Avoid leaving your device in direct sunlight and never expose it to extreme heat.
- Always keep your device fully assembled during use and make sure all seals and connections are tight. Your device is only waterproof when properly assembled.
- Your device is designed to warm up during use. The silicone texture covers are to be used to add texture and minimize warming if desired when in use.
- These compact massagers are designed for external use only unless used in combination with the textured silicone ring.

 Modes

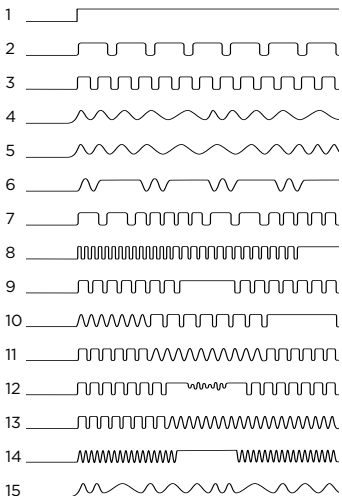

SPECIFICATIONS

Material	Body-Safe Metal & Silicone
Size	24.3 (L) x 119 (H) x 18 (D) mm
Weight	66 g
Battery	120 mAh
Charging	1.5 hours
Use Time	1 hour
Interface	3 button, manual control

WARRANTY

Warranty covers all defects in workmanship or materials under normal usage and care for a period of 12 months from the date of purchase.

Original proof-of-purchase is required to obtain warranty services. Do not attempt to repair your massager yourself. For any warranty inquiries or return information, email customerservice@lewandmassager.com

Le Wand™ is not responsible for loss or damage of returned products.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



RoHS
2002/95/EC



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

Complete user instructions in additional languages and FAQ can be found at: www.lewandmassager.com

Email us at customerservice@lewandmassager.com for any unanswered questions.

Designed and Developed by Le Wand™
Made in China © 2019 Le Wand™

